

USER MAINTENANCE INSTRUCTIONS

CARING FOR YOUR TRUE GLOW™ VIBRATING MAKEUP BRUSH SET

1. After each use, wipe the brush handle with a damp cloth to remove any makeup used during application.
2. Clean makeup brush monthly by rinsing under warm, soapy water to help remove makeup buildup, wipe with a dry cloth and store unit in its box or in a dry place.
3. Do not use abrasive cleaners for cleaning.
4. Do not put unit in dishwasher for cleaning.

NOTE: It is recommended to replace the brush attachments every 90 days, as the bristles wear over time and lose their efficacy.

TROUBLE-SHOOTING GUIDE

THE BRUSHES ARE NOT WORKING.	<ol style="list-style-type: none"> 1. Make sure the contacts in the unit are clean. See user maintenance instructions for cleaning procedure. 2. Make sure the batteries are installed properly.
THE BRUSHES OPERATE AT SLOW SPEED.	Replace the batteries.
THE BRUSH FALLS OFF DURING USE.	<ol style="list-style-type: none"> 1. Make sure the brush head is snapped on properly. 2. Replace the brush head.

INSTRUCTIONS FOR USING BATTERIES

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Replace all batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment that is not to be used for an extended period of time.
6. Remove used batteries promptly.
7. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

BATTERY DISPOSAL: Batteries contain various materials that must be recycled and disposed of properly. Do not dispose of in the municipal waste system.

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE VIBRATING MAKEUP BRUSH SET

1. Close supervision is required when this product is used on, by or near children or people with certain disabilities.
2. Use product only for its intended use as described in this instruction booklet. Do not use attachments not recommended by the manufacturer.
3. Keep the unit away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.
6. Never operate if the product is damaged.
7. Not for use by children.
8. Water resistant: Can be rinsed in a shower, but not submerged.

The True Glow™ Vibrating Makeup Brush Set handle has no serviceable parts. Call 1-800-3-CONAIR for instructions to purchase replacement brush heads.

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow™ Vibrating Makeup Brush Set is a makeup device that is intended to help you apply your favorite foundations and powders. The True Glow™ Vibrating Makeup Brush Set is not a medical device and is not intended to be used to treat any medical conditions such as acne.

If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use.

We recommend not sharing the sponge/brush heads; each user should have their own brush head.

Do not use with exfoliation creams with rough or jagged particles.

If you experience any pain or discomfort during use, stop using and consult your physician.

Apply a small amount of foundation to the brush or sponge. Do not apply pressure with the brush to the face; let the vibration perform the application.

TRUE GLOW™ VIBRATING MAKEUP BRUSH SET FEATURES




ATTACHMENTS

MAKEUP SPONGE: For perfect foundation blending.

MAKEUP BRUSH: Perfect for applying your favorite foundation or powder to the entire face.

NOTE: Your True Glow™ Vibrating Makeup Brush Set may only include certain attachments. See retailer for replacement units or call 1-800-3-CONAIR or visit www.trueglowbyconair.com

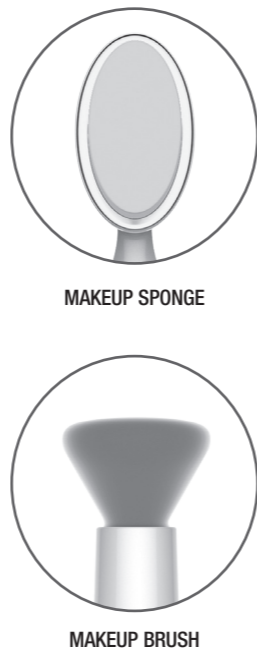

OPERATING INSTRUCTIONS

NOTE: The True Glow™ Vibrating Makeup Brush Set operates on 1 AA battery (not included).

1. Remove the battery cover until the battery door is released.
2. Install 1 AA battery (not included) as per the markings in the battery compartment.
3. Replace the cover until the battery door is firmly closed.
4. Select brush attachment and push it down onto the mounting post until firmly in place.



STARTING THE VIBRATING MAKEUP BRUSH SET Press the ON/OFF button one time to turn on the Vibrating Makeup Brush Set.

STOPPING THE VIBRATING MAKEUP BRUSH SET Press ON/OFF button two times to stop the unit.

ATTACHING AND REMOVING ATTACHMENTS To attach, hold the brush by the rim and attach over mounting post until it firmly snaps into place. To remove, hold the rim and pull off.



INSTRUCTIONS FOR USING THE VIBRATING MAKEUP BRUSH SET

STEP 1

Remove sponge attachment from handle. Dampen sponge with water.

STEP 2

Attach sponge to handle then apply foundation to sponge.



STEP 3

Turn on the vibrating action, gently glide across skin for the perfect blending application.



Due to continuing product improvements, the actual product purchased may differ slightly from the one shown.

Please register this product at www.conair.com/registration

SERVICE CENTERS CONAIR CORPORATION

Service Department
150 Milford Road
East Windsor, NJ 08520

CONAIR CORPORATION

Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Visit us on the web at www.conair.com

©2018 Conair Corporation
East Windsor, NJ 08520
Glendale, AZ 85307
stock.image

18PS053244

IB-15666

true glow™ glam



VIBRATING MAKEUP BRUSH SET

CONAIR®

Model MBS1 All Versions

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

STEP 4

After your foundation is set, change the sponge to the blush brush attachment to apply your fave bronzer or blush.



STEP 5

Do not press the brush hard against your skin, as it will reduce the motion and effectiveness. Keep the brush in tight contact and flush against the skin.

STEP 6

Move the brush in a slow, circular motion around your face. Let the vibration do the application.

NOTE: Do not apply makeup close to the eyes to avoid risk of injury.

INSTRUCCIONES DE MANTENIMIENTO

LIMPIEZA DEL CEPILLO DE MAQUILLAJE VIBRADOR TRUE GLOW®

- Después de cada uso, limpie el mango de la unidad con un paño ligeramente humedecido para eliminar los residuos de maquillaje.
- Limpie el cepillo de maquillaje cada mes, enjuagándolo en agua jabonosa tibia para eliminar los residuos de maquillaje. Séquelo con un paño seco y guárdelo en su caja o en un lugar seco.
- No utilice limpiadores abrasivos para limpiar la unidad.
- No meta la unidad en el lavavajillas.

NOTE: se recomienda cambiar los cepillos cada 3 meses, ya que las cerdas se desgastan con el paso del tiempo, haciendo que los cepillos pierdan su eficacia.

RESOLUCIÓN DE PROBLEMAS

LA UNIDAD NO SE ENCIENDE.	<ol style="list-style-type: none">Cerciórese de que los contactos de la pila están limpios. Véase las instrucciones de mantenimiento/limpieza.Cerciórese de que la pila está debidamente instalada.
EL FUNCIONAMIENTO ES LENTO.	Cambie la pila.
EL CEPILLO SE CAE DURANTE EL USO.	<ol style="list-style-type: none">Cerciórese de que el cepillo está debidamente instalado.Cambie el cepillo.

INSTRUCCIONES ESPECIALES ACERCA DEL USO DE LAS PILAS

- No utilice pilas que no sean del tamaño ni de la potencia indicados para uso con este aparato.**
- Cambie todas las pilas al mismo tiempo.**
- Limpie los contactos del aparato y los de las pilas antes de instalar estas.**
- Siempre respete los signos de polaridad (+/-) al instalar las pilas.**
- Saque las pilas si no va a usar el aparato por un largo período de tiempo.**
- Saque las pilas gastadas lo antes posible.**
- No junte pilas nuevas con pilas usadas/gastadas. No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas/baterías recargables.**

RECICLAJE DE LAS PILAS/BATERÍAS: las pilas contienen materiales que deben reciclarse según las leyes vigentes. No las tire con el resto de la basura.

GARANTÍA LIMITADA DE UN AÑO (VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) este producto sin cargo por un período de 12 meses a partir de la fecha de compra si resulta ser defectuoso en materiales o mano de obra.

Para obtener servicio técnico bajo esta garantía, regrese el producto defectuoso al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$3.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS, A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA.

Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.

Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CARACTERÍSTICAS DEL CEPILLO DE MAQUILLAJE VIBRADOR TRUE GLOW™



ACCESORIOS

ESPONJA DE MAQUILLAJE: Para aplicar base de manera perfecta.

CEPILLO DE MAQUILLAJE: Perfecto para aplicar su base favorita o polvo en el rostro entero.

NOTE: puede que su cepillo de maquillaje vibrador True Glow™ no incluya todos los accesorios disponibles. Para conseguir piezas adicionales o repuestos, llame al 1-800-3-CONAIR o visite www.trueglowbyconair.com



INSTRUCCIONES DE OPERACIÓN

NOTA: el cepillo de maquillaje vibrador True Glow™ requiere 1 pila AAA (no incluida).

- Abra el compartimiento de la pila.
- Instale 1 pila AA (no incluida) en el compartimiento, respetando los signos de polaridad +/-.
- Cierre el compartimiento de la pila.
- Instale el accesorio deseado sobre el soporte de montaje, presionando firmemente hasta que encaje.



CÓMO ENCEDER LA UNIDAD

Presione el botón de encendido/apagado una vez para encender la unidad.

CÓMO APAGAR LA UNIDAD

Presione el botón de encendido/apagado dos veces para apagar la unidad.

INSTALACIÓN/REMOCIÓN DE LOS ACCESORIOS

Para instalar un accesorio, sostenga este por la orilla e insértelo sobre el cabezal, presionando firmemente hasta que encaje. Para quitarla, sosténgalo por la orilla y jálelo hacia arriba.

MODO DE EMPLEO DEL CEPILLO DE MAQUILLAJE VIBRADOR

PASO 1

Saque la esponja del mango y humedézcala con agua.


PASO 2

Sujete la esponja al mango, y luego aplique base en la esponja.




PASO 3

Encienda la unidad para activar las vibraciones y deslice suavemente la esponja contra la piel para aplicar la base de manera perfecta.

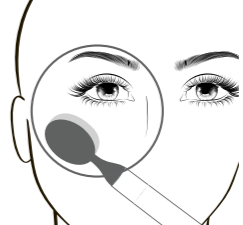

PASO 4

Después de aplicar la base, saque la esponja e instale el cepillo para aplicar su polvo bronceador o color/ete/rubor favoritos.

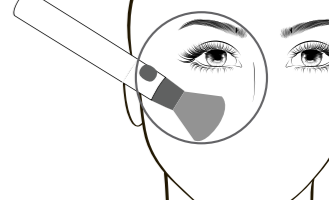

PASO 5

No presione mucho el cepillo contra la piel; esto disminuirá su movimiento y reducirá su eficacia. Mantenga el cepillo contra la piel, sin presionar.

PASO 6

Mueva el cepillo lentamente contra la piel, haciendo pequeños movimientos circulares. Deje que la vibración lleve a cabo la aplicación.

NOTE: no aplique maquillaje/base muy cerca de los ojos; esto puede causar lesiones.

Debido a las mejoras continuas en nuestros productos, el producto comprado puede diferir ligeramente del producto ilustrado.

Para registrar su producto, visítenos en: www.conair.com/registration

CENTROS DE SERVICIO CONAIR CORPORATION

Service Department
150 Milford Road
East Windsor, NJ 08520

CONAIR CORPORATION

Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Visítenos en www.conair.com

©2018 Conair Corporation
East Windsor, NJ 08520
Glendale, AZ 85307

Fotografía de banco de imágenes

18PS053244

IB-15666

true glow™
glam



CEPILLO DE MAQUILLAJE VIBRADOR

CONAIR

Modelo MBS1 (todas las versiones)

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.